Made in Germany



AQUBE[®] XV7

Fully automatic high end 3-tank, 3-circuit PowerSpray[®] XL ultra-fine cleaning system for DCB and PCB cleaning

Cleans DCBs, PCBs, hybrids and misprints from flux residues, resin, copper, oxide and soldering support substances

Capacity: 20 DCB panels (5" x 7") or 36 eurocards

Part number: 0905AQ7XV731



Certifications:


This system in its basic version was certified for its energy and water saving processing, for easy operability and for the standard integration of comprehensive safety features.

- * Three tank system with three separate circuits
- * Intelligent network connectivity for implementation in industry 4.0 smart factories
- Fully automatic 5step process: cleaning, MediumWipe[®], tap water rinsing, DI-water rinsing, CWA[®]-supercharger compression drying
- * Vertical PTFE mounted rotor system with four asynchronous spray rotors for thorough wetting (no blind spots)
- * Short cycle times due to placing the cleaning goods close to the spray rotors
- * Heater in tank A (cleaning), tank B and tank C (rinsing) as a standard feature

Ceramic substrates

- * Automatic monitoring of ionic residues contamination and controlling of rinse water quality
- * Process and service intervals PLC controlled, event issuing and software control via touch screen
- * EDGELESS Design and VARIccess[®] service access: maximum capacity, easy maintenance on a very small footprint

Key applications

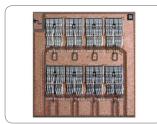

DCBs





Hybrids (SiPs)



Assembled PCBs

The new **kolb** AQUBE[®] series offer next-generation cleaning systems - even more efficient, even more compact, easy to handle and maintain, pre-equipped for extended water management and cyber-physically ready for the smart factory (SF ready).

AQUBE[®] XV7 is a completely German engineered and manufactured fully automatic XL cleaning system (except **kolb** AQUBE[®] 9 types there are no batch systems with a comparably large chamber size available worldwide) with vertical rotor technology for highest demands in process safe ultra fine cleaning

The parallel working three-tank, three-circuit configuration with ClosedLoop water reprocessing ensures short cycle times as well as low running cost, leading to an uncontested low total cost of ownership value.

The cleaning system can be operated with all common electronics cleaning supplies (detergents / chemistry, etc.) which are approved by the manufacturer.

All rights for changes reserved that lead to technical improvement.


© kolb GmbH 2017

kolb Cleaning Technology GmbH • Karl-Arnold-Str.12 • D - 47877 Willich • Phone: +49 (0) 2154 9479 - 38 • Fax: +49 (0) 2154 9479 - 47 • e-mail: info@kolb-ct.com • www.kolb-ct.com Page 1 of 6





Made in Germany

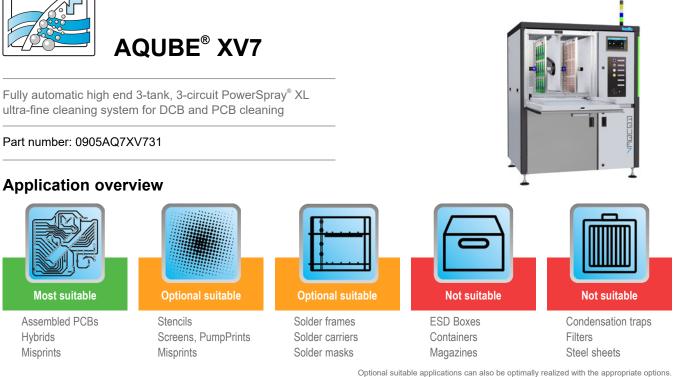

Cleaning (key process 1): From the cleaning tank (A) the cleaner liquid is sucked by a magnetically coupled pump unit and routed with a controllable volume flow through a separate circuit into the PTFE mounted ASYNCHRO[®] stainless steel spray rotors with patented PUSHFORCE[®] nozzles. Their geometry ensures a comprehensive and thorough cleaning, even in inaccessible and critical aereas. After the washing procedure, the valve switchover of the process chamber undocks the cleaning circuit until the next process run.

MediumWipe[®] (optional intermediate process): The remaining cleaner is blown off from the clean products and blown out of the cleaner circuit and recirculated into the cleaning tank before the valve switchover closes.

Rinsing with tap water (key process 2): From the first rinsing tank (tank B), the water is pumped through the separate second circuit into the spray rotors. Tap water has (compared to DI / DM water) the advantage of lower surface tension and thus flushes also critical points as low standoffs more efficient.

MediumWipe[®] (intermediate process): The remaining water is blown off from the products and blown out of the cleaner circuit and recirculated into the rinsing tank.

Clear rinsing with DI / DM water (key process 3): The DI / DM water is produced in an integrated MB-cartridge from tap water and kept in the second rinsing tank (tank C). Through the third cycle it flushes conducting ions of the preliminary processes. This process is repeated automatically until the remaining amount of ions falls below the programmed value.

MediumWipe[®] (intermediate process): Blowing off and recirculating the remaining DI / DM water into the rinsing tank.

Drying (key process 4): The purified products are dried with the patented CWA[®] (Compressed Warm Air) technology. The built-in special compressor compresses the ambient air. At the same time it collects the kinetic energy (frictional heat) of the paddle wheel in the unit, then presses the heated and compressed air into the rotor nozzles which were already used for cleaning and rinsing. There it blows off (pressure) and evaporates (heat) the residual moisture. This method is energetically and constructively highly efficient, as it uses the "waste heat" of the compressor rotation and the compressed air as driving power for the rotors. In addition, a system equipped with CWA[®] technology requires no additional hardware and no external compressed air connection for the MediumWipe[®] process.

Maintenance: The system has a VARIccess[®] maintenance access system with recessed, variable doors and removable panels. In the maintenance area among others are the pump-out set, the optional re-dosage unit with space for a 25 liter detergent and a 5 I additive container as well as the MB cartridge for DI / DM water processing. Tank levels as well as pressure values and maintenance cycles are monitored by the PLC and displayed on the touch screen.

All rights for changes reserved that lead to technical improvement.

kolb Cleaning Technology GmbH • Karl-Arnold-Str.12 • D - 47877 Willich • Phone: +49 (0) 2154 9479 - 38 • Fax: +49 (0) 2154 9479 - 47 • e-mail: info@kolb-ct.com • www.kolb-ct.com Page 2 of 6 09/17



Made in Germany

AQUBE[®] XV7

Fully automatic high end 3-tank, 3-circuit PowerSpray[®] XL ultra-fine cleaning system for DCB and PCB cleaning



Part number: 0905AQ7XV731

Main standard features

- PowerSpray[®] technology bundle: magnetically coupled X-power pump unit, twofold ASYNCHRO[®] volume-spray rotorsystem with low maintenance PTFE mounted stainless steel rotors with PUSHFORCE[®] nozzles, "Option101" softwareprogram (101 freely selectable programs)
- PolyPower[®] pump nozzles configuration
- EATON Programmable Logic Controller (PLC) with module extension for special programming and technology extensions
- Smart Factory ready: DNAccess[®] (standard) for remote control (see options) and traceability with retractable touch monitor and integrated industrial PC (see options)
- □ High resolution 10" (1.024 x 600 px) display with capacitive multi-touch and intuitive process view
- $\hfill\square$ Fourfold alternating LED status light bar integrated in the system frame
- Duplex washing cart
- Cartridge fine filter for cleaning and both rinsing circuits
- Full flow coarse filter (process chamber)
- □ Heater for tank A (cleaning), B and C (rinsing)
- MediumWipe[®] unit for further optimization of detergent and rinsing fluid use
- Automatic monitoring of ionic residues contamination and gauging of rinse water quality
- Adjustable DI / DM water mixing and blending unit
- □ CWA[®]-supercharger compression drying
- ClosedLoop reprocessing of cleaning and rinsing fluids
- B HMA software and pre-equipping for HMA hardware (Heavy Metal Adsorber) for the cleaning circuit (see options)
- □ Spare space for MB- / DI-cartridge for deionized (DI) and demineralized (DM) water
- □ Exchange for rinse water and pump out unit
- □ Safety features: safety interlock on the process chamber door, overflow alarm for all tank sections, overheating protection for all heating and drying elements, end switches for all motor-driven valves and drives, personnel protection insulation
- VARIccess[®] service access with right and left-hinged side doors as well as unhinging possibility for side doors, front panel, and rear supply rail
- EDGELESS housing design. Doors, cover panels and hinges without edges, depot for traceability scanner and monitor in the right side panel
- Process sections made of electrolysis resistant elements




Made in Germany

AQUBE[®] XV7

Fully automatic high end 3-tank, 3-circuit PowerSpray[®] XL ultra-fine cleaning system for DCB and PCB cleaning

Part number: 0905AQ7XV731

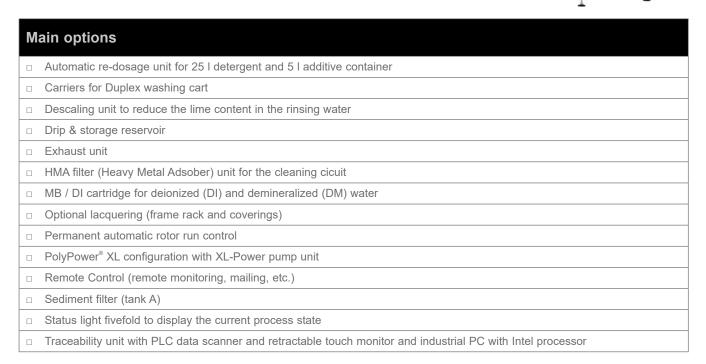





AQUBE[®] XV7

Fully automatic high end 3-tank, 3-circuit PowerSpray[®] XL ultra-fine cleaning system for DCB and PCB cleaning

Part number: 0905AQ7XV731



Internal rinse water processing (s	andard) Options* for water management
Cleaning System Cleaning cycle Rinsing cycle	Options for water management WPSD IU SYMBIO-module Processes mandatory disposable sewage water to be discharged into a public sewage network. WPCL IUT3 SYMBIO-module Recycles DI / DM water for recirculation and multiple reuse in the cleaning systems clear rinsing cycle.
Contaminated rinse water	

* Operating companies of industrial cleaning systems are responsible for proper disposal of wastewater / rinse water and (wasted) cleaning detergent. Further information on wastewater management at <u>www.kolb-ct.com/systems/water-</u> <u>management/</u>, consulting requests to <u>info@kolb-ct.com</u>

All rights for changes reserved that lead to technical improvement.

© kolb GmbH 2017

kolb Cleaning Technology GmbH • Karl-Arnold-Str.12 • D - 47877 Willich • Phone: +49 (0) 2154 9479 - 38 • Fax: +49 (0) 2154 9479 - 47 • e-mail: info@kolb-ct.com • www.kolb-ct.com Page 5 of 6 09/17



Made in Germany


AQUBE[®] XV7

Fully automatic high end 3-tank, 3-circuit PowerSpray® XL ultra-fine cleaning system for DCB and PCB cleaning

Part number: 0905AQ7XV731

_		
Tool	hnical	data
- Let		Uala

Technology base	kolb PowerSpray [®]	
Capacity	20 DCB panels 5" x 7" or 36 eurocards	
Process chamber dimensions	W 700 • D 710 • H 720 mm	
Usable chamber dimensions	2 slots: B 50 = T 620 = H 620 mm	
Volume tank A (cleaning), B (rinsing)	approx. 50 l each	
Volume tank C (DI-rinsing)	approx. 110 I	
Power supply	400 V AC, 16 A CEE / 3PH / 50 or 60 HZ	
Power consumption	approx. 4.1 kW	
Control system	PLC (EATON)	
Temperature load	up to 55 °C	
Filter system	up to four stage - 1. Full flow coarse filter < 2 mm, 2. Sediment filter inside the tank, 3. 20" fine filter (1 - 100µm - process dependent), 4. HMA filter	
Supply connection 1 (tap water)	3/8", hose connection 14 mm (prov. by customer: inlet water quality < 350 μ S conductance value (< 10° dH) or option descaling unit)	
Supply connection 2 (DI / DM water)	1/4", hose connection 14 mm (DI-net prov. by customer or bridging to tap water)	
Supply connection 3 (compressed air)	6 - 8 bar (100 I / min) for DCB MediumWipe [®] process	
Rinse water drain connection	3/4", hose connection 25 mm with integrated pump out system	
Exhaust connection	Ø 160 mm, exhaust capacity 200 to 300m³ / h	
Footprint	1.170 x 1.350 mm	
Operating noise	74 dB (A)	
Empty weight	530 kg	

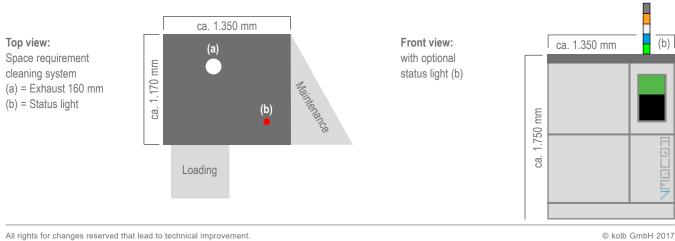

All rights for changes reserved that lead to technical improvement.

kolb Cleaning Technology GmbH • Karl-Arnold-Str.12 • D - 47877 Willich • Phone: +49 (0) 2154 9479 - 38 • Fax: +49 (0) 2154 9479 - 47 • e-mail: info@kolb-ct.com • www.kolb-ct.com Page 6 of 6 09/17